


# Ikelite

## Pro-V8 LED Video Lite to AF35 Tray Ball Mount Accessories

### Installation Instructions

#### KIT ACCESSORIES

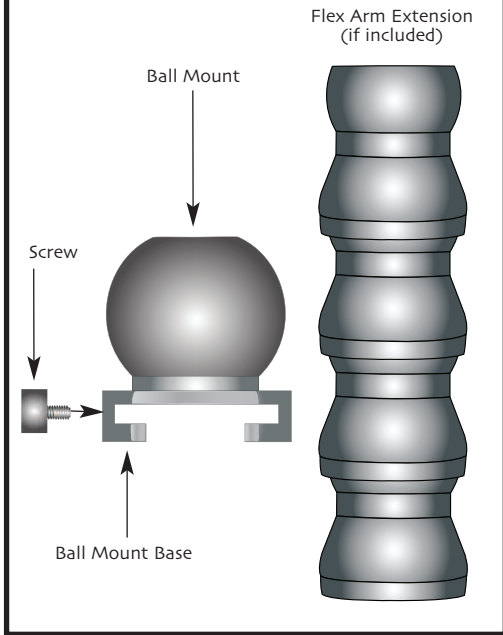


#### Installation Instructions

1. Insert screw into Ball Mount as shown (Figure 1). Screw threads should NOT protrude into Ball Mount base.
2. Slide Ball Mount onto AF35 Tray as shown (Figures 2 and 3, Page 3). Make sure the screw goes into the notch when tightening. If installed correctly, the screw head will be flush with the ball mount base.
3. If your kit contains a flex arm extension, it can be added to lengthen the existing Pro-V8 Flex Arm (Figure 4, Page 3).
4. Attach the Pro-V8 Flex Arm to the Ball Mount or Flex Arm Extension by pressing the Flex Arm Extension down onto the Ball Mount (Figure 4, Page 3). If necessary, place soapy water on the Ball Mount to assist the attachment procedure.

**CAUTION: Do not carry your system by the Flex Arm. The Flex Arm is not designed to be used as a carry handle.**


Figure 1

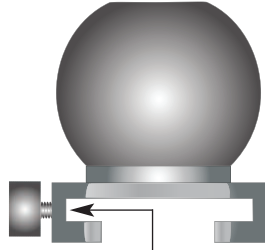

Screw threads should not protrude into Ball Mount Base before installing Ball Mount onto the AF35 Tray.

2

#### Installation Illustrations

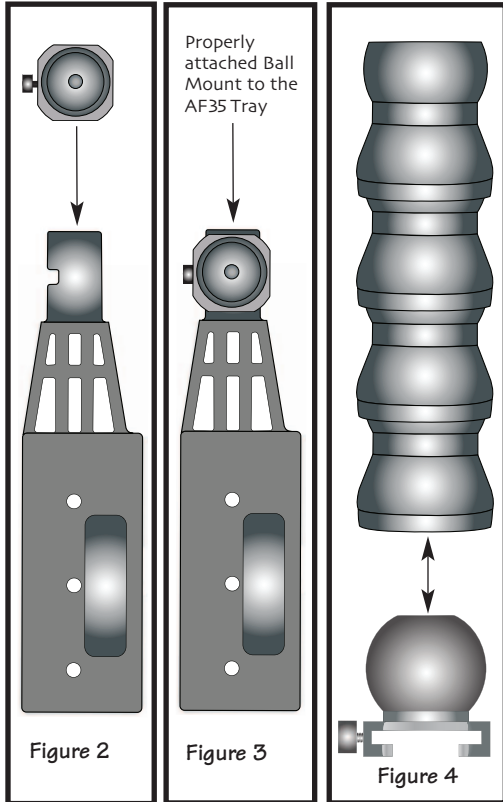

3



Ikelite Underwater Systems  
50 W 33rd Street  
Indianapolis, IN 46208 USA

When returning products send  
"attn. Repair Dept."

"general questions" e-mail:  
[ikelite@ikelite.com](mailto:ikelite@ikelite.com)  
[www.ikelite.com](http://www.ikelite.com)  
317-923-4523