




Tray with Handles

Instruction Manual

9523.68 DSLR Tray with Handles

Package Contents

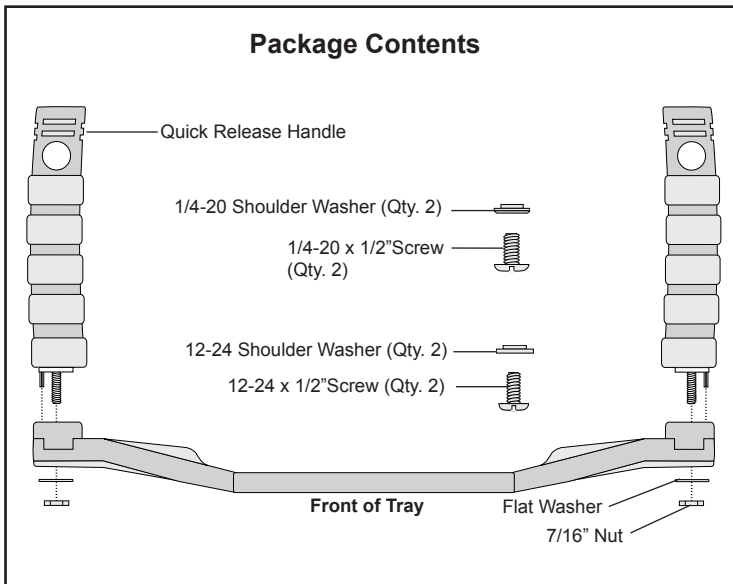


Thank you for choosing Ikelite equipment. Please read this instruction manual completely before attempting to operate or dive with this product.

Attaching Handle to the Tray

Insert handle into the tray as shown. The Quick Release Button should extend toward the back of the tray, diagram B, page 3. Attach and tighten handle to tray using Flat Washer and 7/16" nut.

Note: Looking at the Tray Bottom, the Nikon D300s housing tray must be rotated 180 degrees before attaching to the housing, so that the back of the tray is now facing the front of the housing. This allows housing controls to be pulled out for proper camera installation. Handles should be installed so the Quick Release Buttons extend toward the back of the housing.

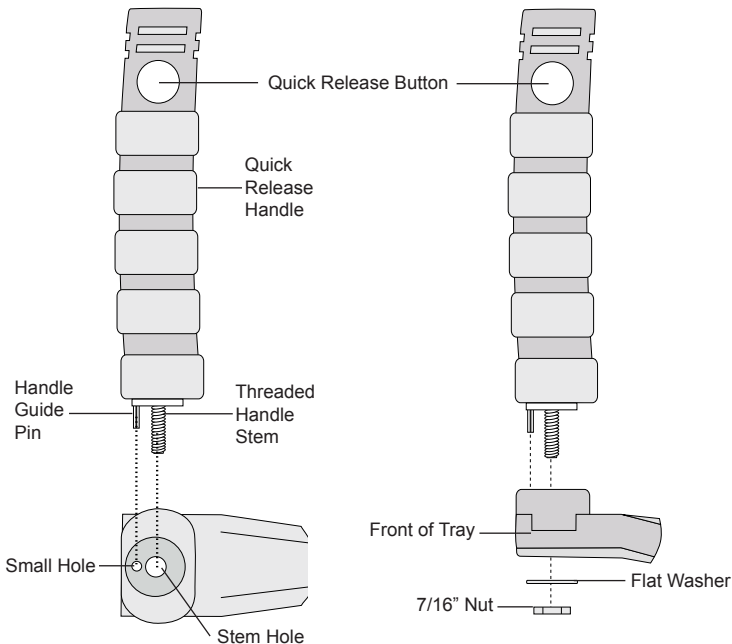

Attach Tray to Housing

Attach tray to housing using the 12-24 x 1/2" Screws and Shoulder Washers, diagram A. For housings with 1/4-20 female threaded mounts, use the 1/4-20 x 1/2" Screws and Shoulder Washers.

Tray may be attached using the front or rear Tray Attachment Points which best suit access to your housing controls, diagram B. When the tray is properly attached, the Quick Release Buttons will extend toward the rear of the housing.


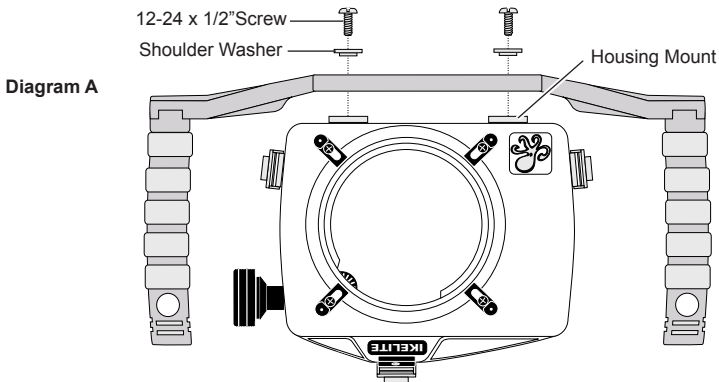


Diagram B

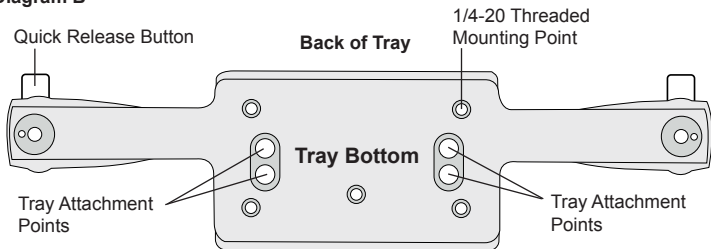

Accessory Mounting Points

The bottom of the tray features five 1/4-20 threaded mounting points for attachment of either a tripod or Pro-Video battery pack, diagram B, page 3. When mounting a Pro-video battery pack, use the two 1/4-20 threaded mounting points closest to the back of the housing.

Limited Warranty

This product is warranted against any manufacturing defects for a period of one (1) year from the original date of purchase. Defective products should be returned to Ikelite postage paid. Ikelite will, at its sole discretion, repair or replace such products, and will return to customer postage paid. All other claims of any nature are not covered. Except as mentioned above, no other warranty expressed or implied applies to this Ikelite product.



**Ikelite Underwater Systems
50 West 33rd Street
Indianapolis, IN 46208 USA**